

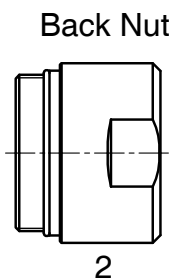
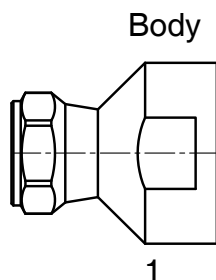


Installation Instructions


Model: ANM-2904

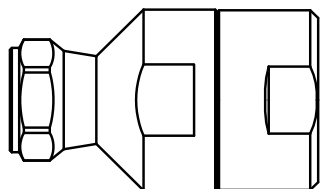


1. Strip cable as follows

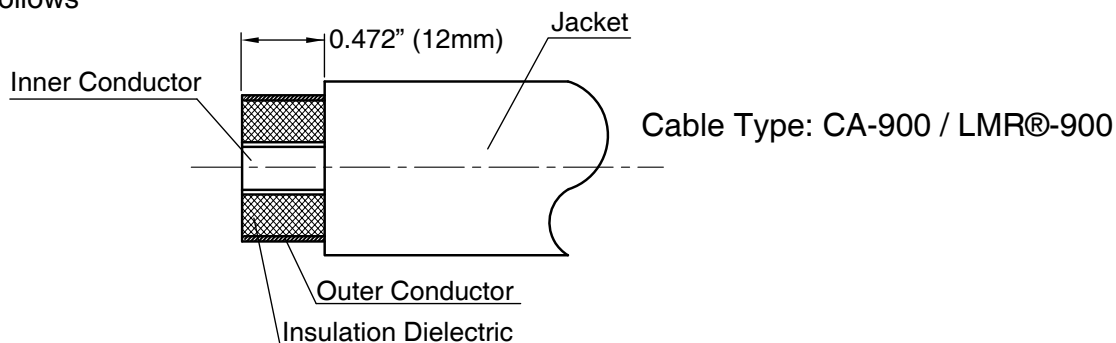


2. Place Back Nut onto cable as shown

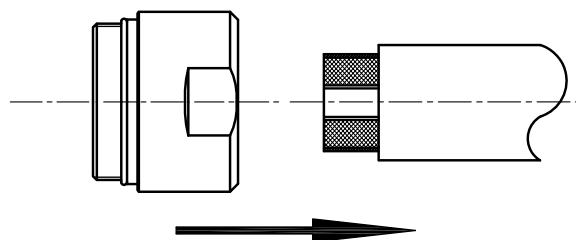

3. Spread out Outer Conductor as shown

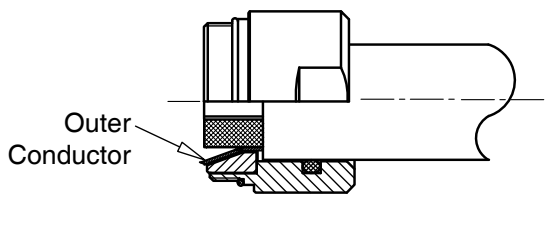

4. Screw part 1 into place

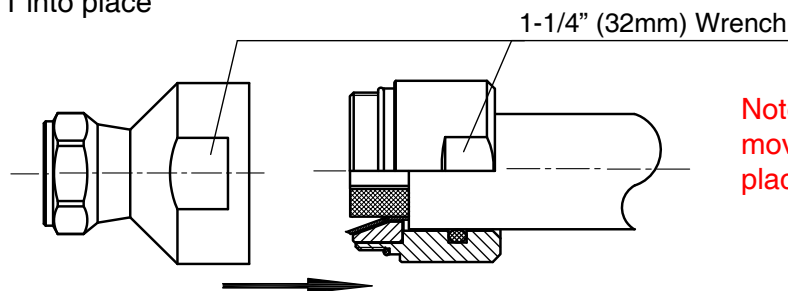

Note: Be sure Back Nut does not move when screwing Body into place.